


- 1 EXTEND EMPTY 3" CONDUIT FROM WIRESDOL TO POWER ELECTRICAL PANEL SERVING THE AREA FOR FUTURE USE.
- 2 SEE TYPE "30" CORD SUPPORT DETAILS FOR ADDITIONAL INFORMATION FOR WITING RECEIPLINES IN FREE STANDING TABLES.
- 3 MOUNT THIRTY-FOUR RECEIPLINES IN CEILING LABEL EACH WITH VOLUME ATTACHED TO IT. (208/120/240, 208/120/240/120V)
- 4 OUTLETS SHALL NOT BE MOUNTED BACK TO BACK ON COMMON WALL. TYPE "30" CORD SHALL BE 1/2-3/8 CONDUCTOR CABLE.
- 5 1/2" X 1/2" X 3/4" PLYWOOD TELEPHONE BACKBOARD PAINTED WITH INSULATING PAINT. SEE TELEPHONE WIRE DIAGRAM.
- 6 4X10 AND 1X10 GROUND IN 3/4" CONDUIT.
- 7 EXTEND 2X12 IN 1/2". FROM 4"X4" WALL MOUNTED JUNCTION BOX IN ROOM TO CERTIFICALLY LOCATED 7"X4" ANTENNA JUNCTION BOX ON ROOF. VERIFY LOCATION OF ROOF ANTENNA JUNCTION BOX IN FIELD.
- 8 CARRY HORN CONTROL. SEE CONTROL LADDER DIAGRAMS.
- 9 SUPPLY AIR CONTROL. SEE CONTROL LADDER DIAGRAMS.

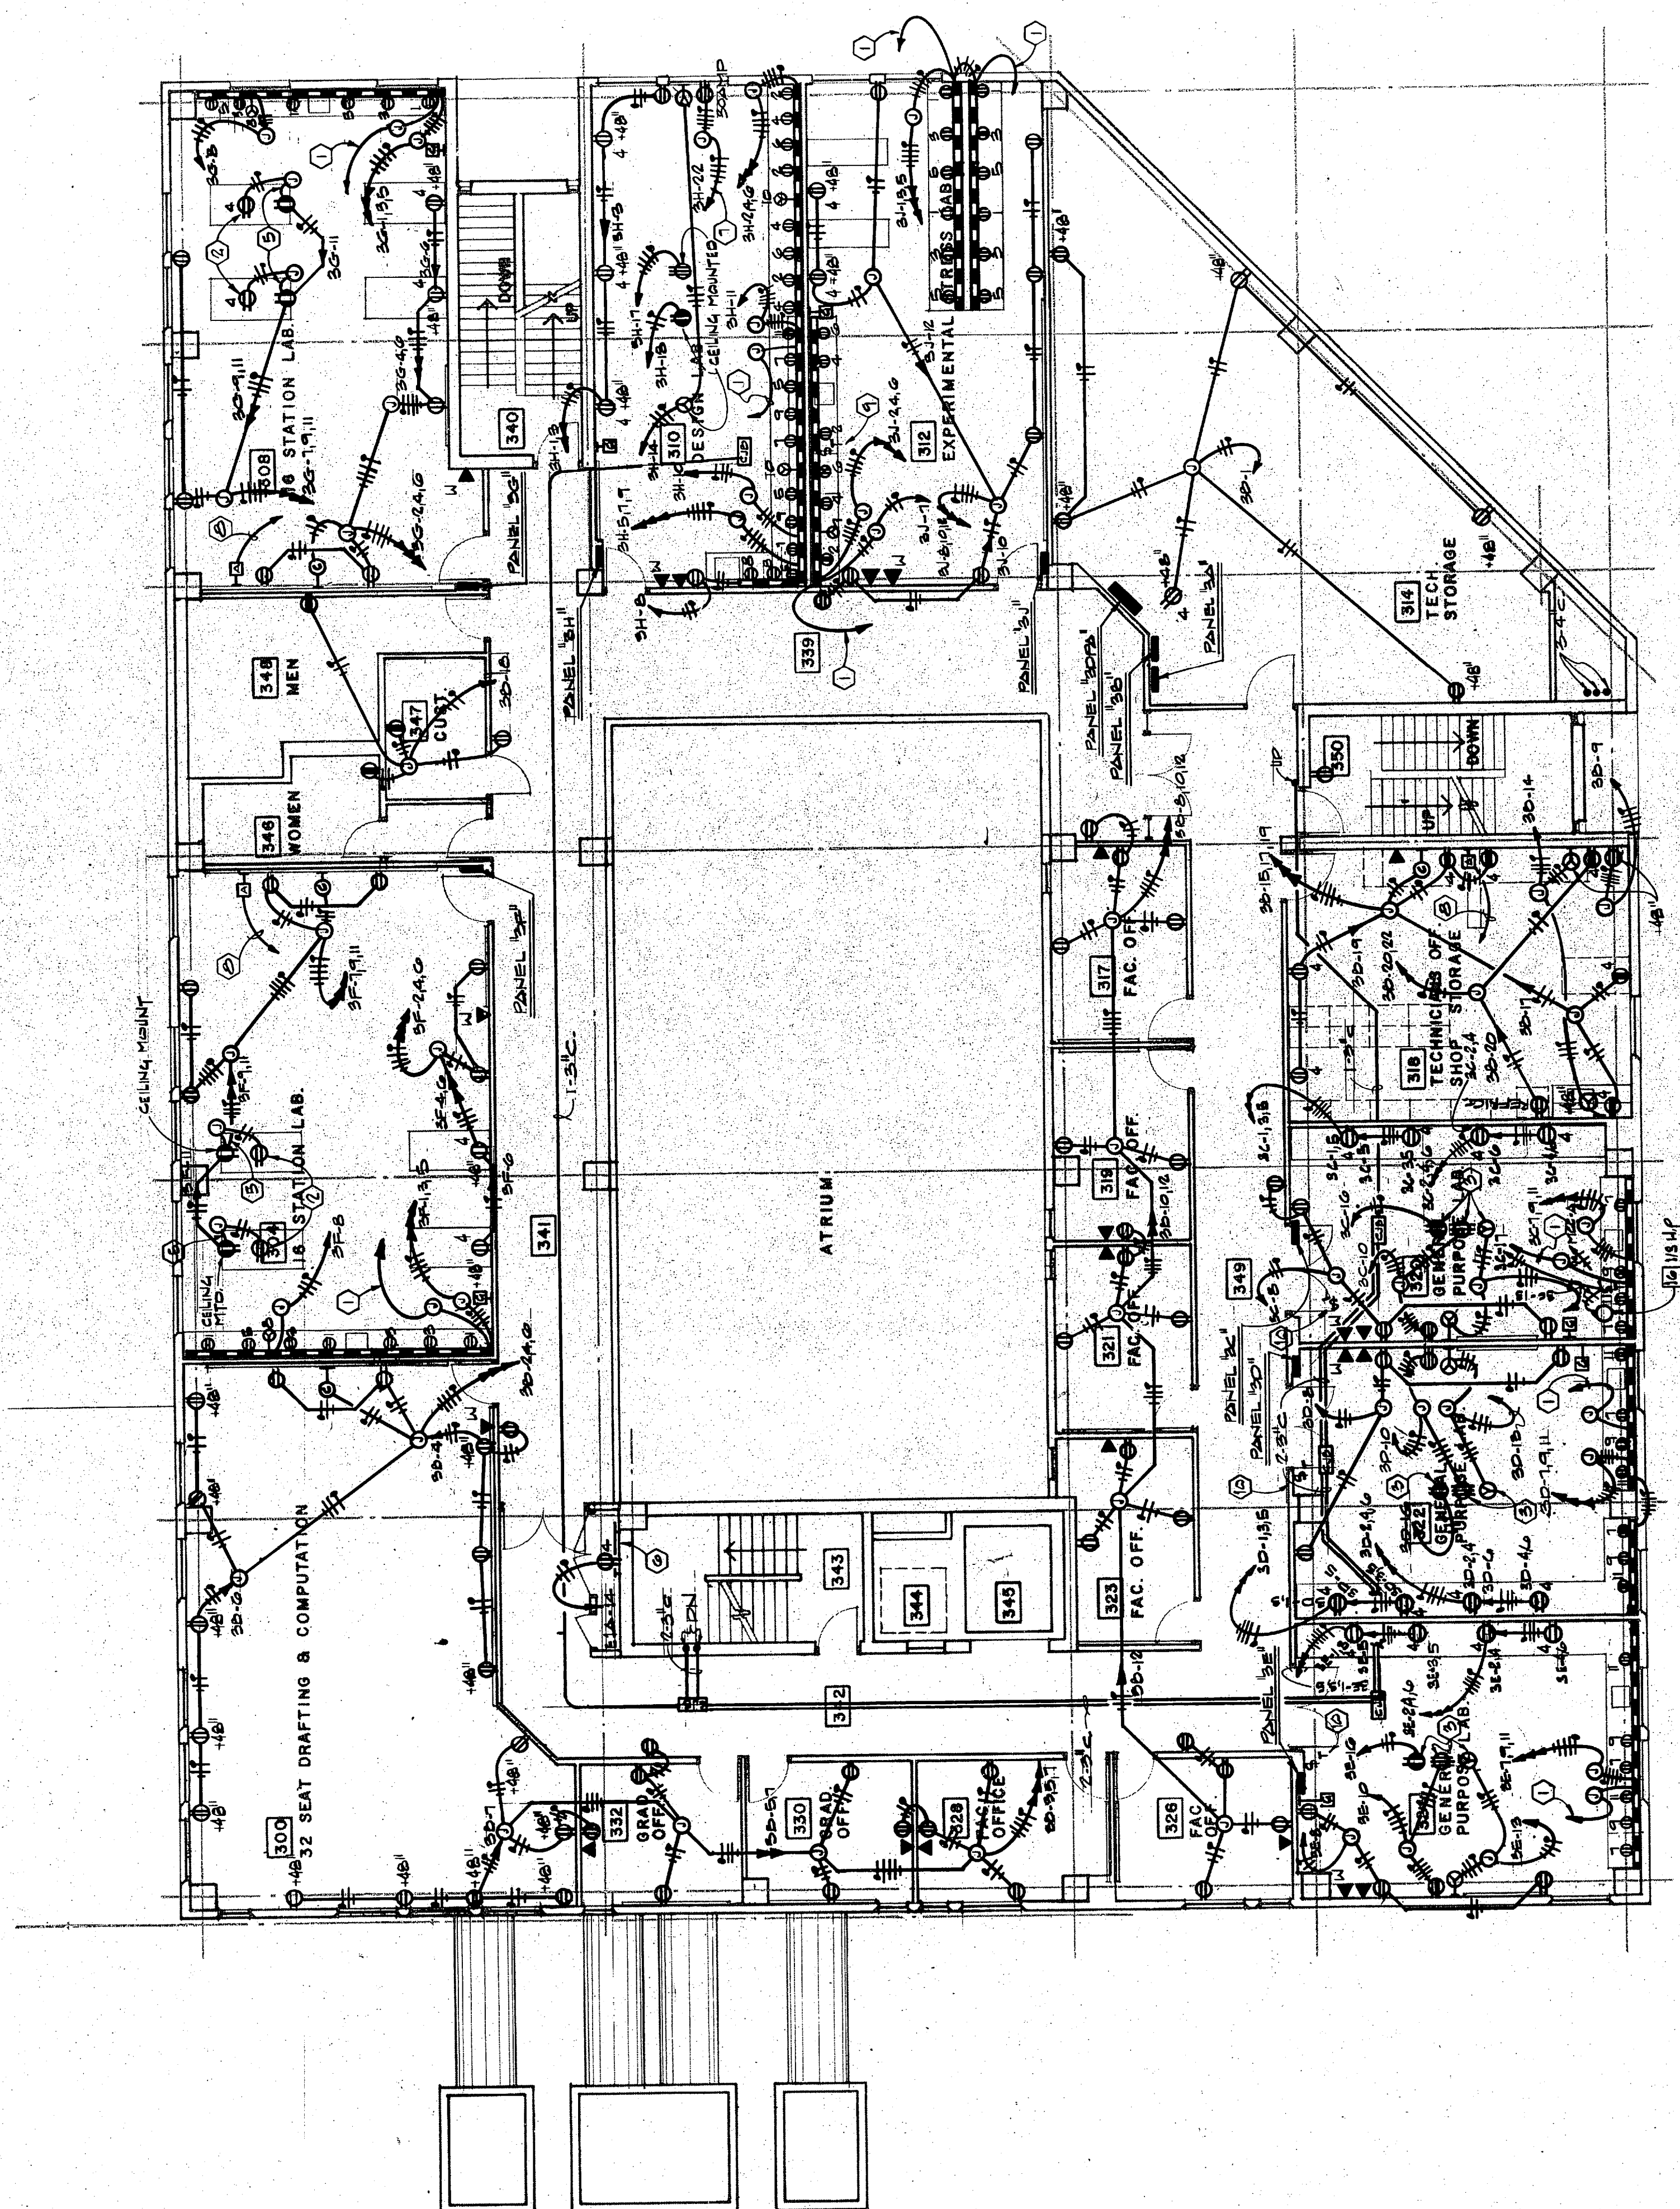

FLOOR PLAN, LEVEL 3

1/8" = 1'-0"

NORTH

4