


NOTES

1. MOUNT RECEPTACLE AND TELEPHONE OUTLET ON WALL BELOW COUNTER.
2. MOUNT RECEPTACLE AND TELEPHONE OUTLETS BELOW COUNTER TYPICAL OF SIX RECEPTACLES AND SIX TELEPHONE OUTLETS.
3. EXTEND EMPTY 3/4" CONDUIT FROM WIRE MOLD TO POWER ELECTRICAL PANEL SERVING THE AREA FOR FUTURE USE.
4. OUTLETS SHALL NOT BE MOUNTED BACK TO BACK ON COMMON WALL.
5. 8" x 3/4" PLYWOOD TELEPHONE BACKBOARD PAINTED WITH INSULATING PAINT. SEE TELEPHONE RISER DIAGRAM.

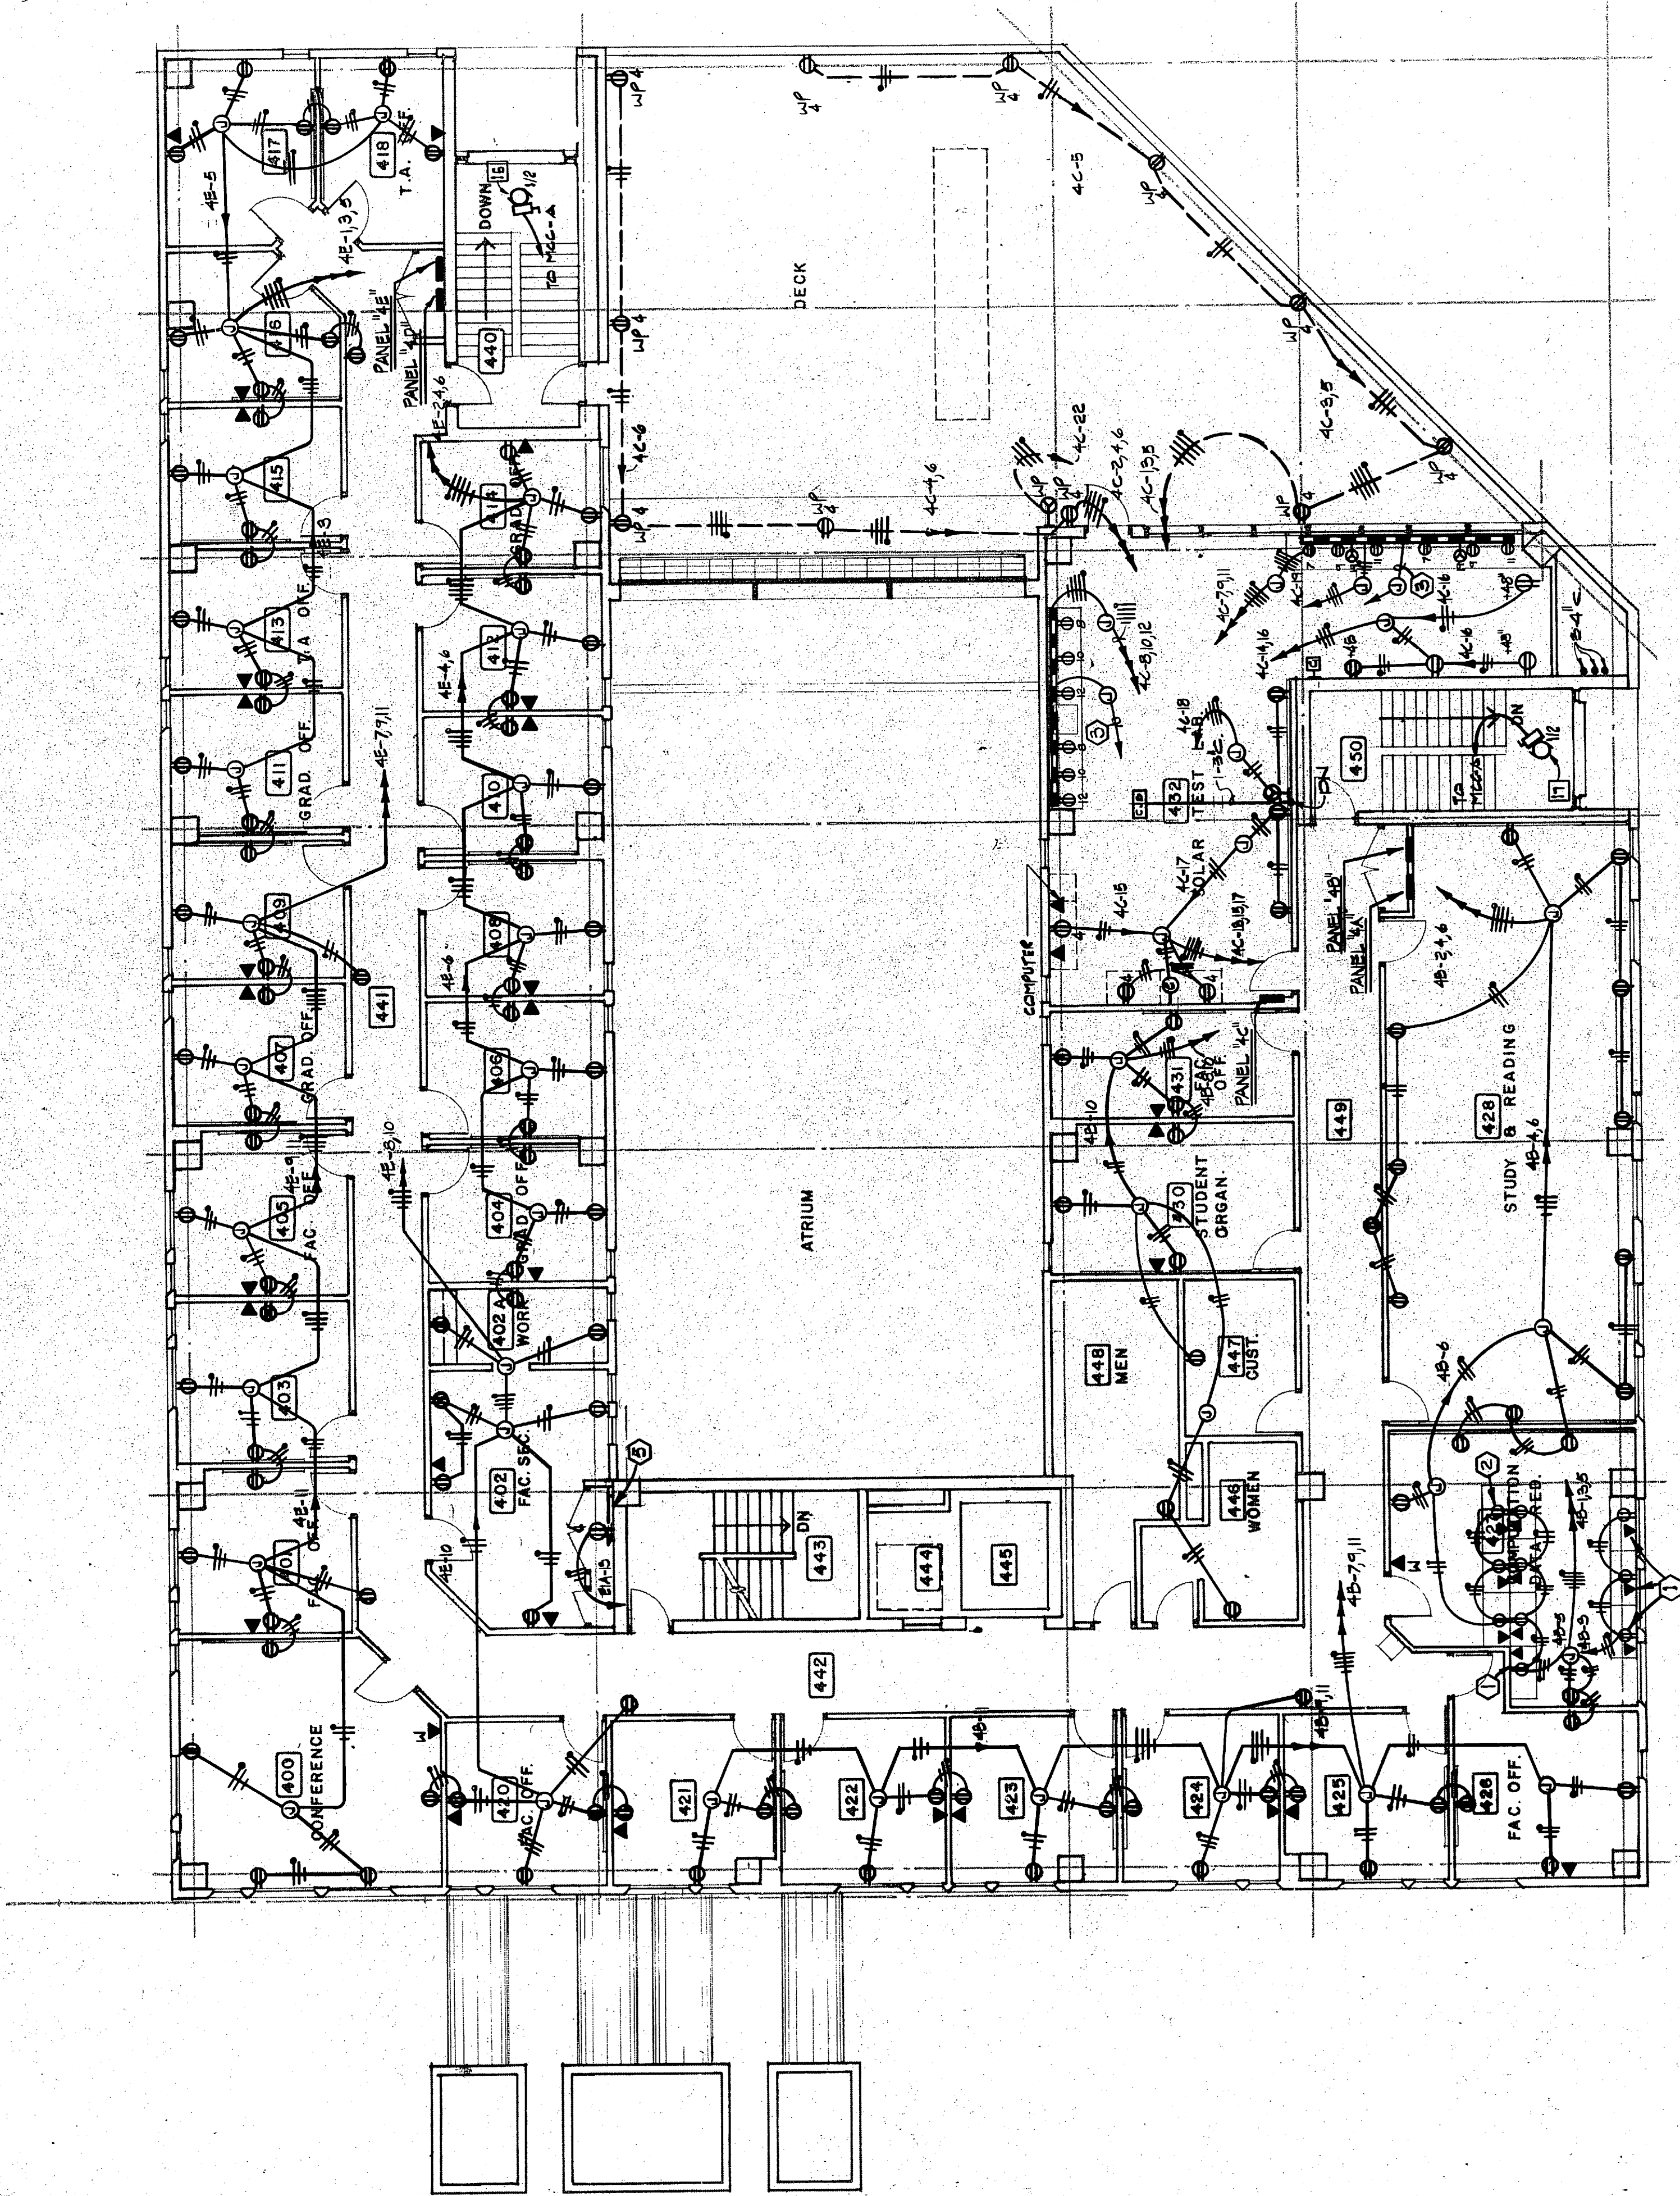

FLOOR PLAN, LEVEL 4
1/8" = 1'-0"

base 6/6/2/07